



J4125 (RTL8125b 2.5Gb) ( )

USB ( )2 + USB ( )1

( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ISO

( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( )

```
https://github.com/dgparker/RTL8125-proxmox-ve-install-script
```

( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) +USB ( ) ( ) \*2+USB ( ) ( ) ( ) ( ) ( ) J4125 ( )

( ) ( ) ( ) USB ( )

( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) Install Proxmox VE (Debug Mode)

( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) Ctrl + D ( ) ( ) ( ) ( )

```
#1. ( ) ( ) ( ) ( )

mkdir /mnt/usb

#2. ( ) ( ) ( ) ( ) ( ) ( )

mount /dev/sdc2 /mnt/usb

#3. ( ) ( ) ( ) ( )

cd /mnt/usb

#4. ( ) ( ) deb . sh ( ) ( ) /tmp

/cp ( ) ( ) /tmp

#5. ( ) ( ) /tmp ( ) ( ) ( ) ( ) ( ) ( )

cd /tmp
```

#6. `sudo setup.sh`

`chmod +x setup.sh`

#7. `lsusb`

`./setup.sh`

#8. `ifconfig`

#9. `lsusb` USB `lsusb`

#`lsusb` `lsusb`

`Ctrl + D`

`lsusb` USB `lsusb`

`lsusb`

`lsusb`

`root`

`1~7`

`nano /etc/network/interfaces`

`bridge-ports` `enp1s0`

`auto lo`

`iface lo inet loopback`

#USB

`iface enx03745ecf4bf inet manual`

#

`iface enp1s0 inet manual`

#

`iface enp2s0 inet manual`

#

```
iface enp3s0 inet manual
#
iface enp4s0 inet manual

auto vmbr0
iface vmbr0 inet static
    address 10.10.2.254/24 #IP
    gateway 10.10.2.1
    bridge-ports enp1s0 #
    bridge-stp off
    bridge-fd 0
```

Ctrl + O Ctrl + X

```
systemctl restart networking.service
```

PVE IP

Revision #5

Created 29 December 2022 15:28:39 by

Updated 29 December 2022 15:45:15 by