



J4125 (RTL8125b 2.5Gb) ()

USB ()2 + USB ()1

() () () () () () () () ISO

() () () () () () () () () () () ()

```
https://github.com/dgparker/RTL8125-proxmox-ve-install-script
```

() () () () () () () () +USB () () *2+USB () () () () () J4125 ()

() () () USB ()

() () () () () () () () Install Proxmox VE (Debug Mode)

() () () () () () () () Ctrl + D () () () ()

```
#1. ( ) ( ) ( ) ( )

mkdir /mnt/usb

#2. ( ) ( ) ( ) ( ) ( ) ( )

mount /dev/sdc2 /mnt/usb

#3. ( ) ( ) ( ) ( )

cd /mnt/usb

#4. ( ) ( ) deb . sh ( ) ( ) /tmp

/cp ( ) ( ) /tmp

#5. ( ) ( ) /tmp ( ) ( ) ( ) ( ) ( ) ( )

cd /tmp
```

```
#6. 設定 setup.sh の実行権限
```

```
chmod +x setup.sh
```

```
#7. 実行
```

```
./setup.sh
```

```
#8. 確認
```

```
#9. 確認 USB の接続状況
```

```
#lsusb | grep -i usb
```

確認完了後 Ctrl + D を入力

確認完了後 USB の接続状況を確認

確認完了後

確認完了後

root 権限で

1~7 の設定を行う

```
nano /etc/network/interfaces
```

bridge-ports 設定に enp1s0

```
auto lo
```

```
iface lo inet loopback
```

```
#USB
```

```
iface enxd03745ecf4bf inet manual
```

```
#
```

```
iface enp1s0 inet manual
```

```
#
```

```
iface enp2s0 inet manual
```

```
#
```

```
iface enp3s0 inet manual
#
iface enp4s0 inet manual

auto vmbr0
iface vmbr0 inet static
    address 10.10.2.254/24 #IP
    gateway 10.10.2.1
    bridge-ports enp1s0 #
    bridge-stp off
    bridge-fd 0
```

Ctrl + O Ctrl + X

```
systemctl restart networking.service
```

PVE IP

Revision #5

Created 29 December 2022 15:28:39 by

Updated 29 December 2022 15:45:15 by