



J4125 (RTL8125b 2.5Gb) ( )

USB2 + USB1

( ) ISO

( )

```
https://github.com/dgparker/RTL8125-proxmox-ve-install-script
```

( )+USB\*2+USB J4125 ( )

( ) USB ( )

( ) Install Proxmox VE (Debug Mode)

( ) Ctrl + D ( )

```
#1. ( )

mkdir /mnt/usb

#2. ( )

mount /dev/sdc2 /mnt/usb

#3. ( )

cd /mnt/usb

#4. ( ) deb . sh ( ) /tmp

/cp ( ) /tmp

#5. ( ) /tmp ( )

cd /tmp
```

```
#6. 設定 setup.sh の実行権限
```

```
chmod +x setup.sh
```

```
#7. 実行
```

```
./setup.sh
```

```
#8. 確認
```

```
#9. 確認 USB の接続状況
```

```
#lsusb | grep -i usb
```

確認完了後 Ctrl + D を入力

確認完了後 USB の接続状況を確認

確認完了後

確認完了後

root 権限で

1~7 の設定を行う

```
nano /etc/network/interfaces
```

bridge-ports 設定 enp1s0

```
auto lo
```

```
iface lo inet loopback
```

```
#USB
```

```
iface enxd03745ecf4bf inet manual
```

```
#
```

```
iface enp1s0 inet manual
```

```
#
```

```
iface enp2s0 inet manual
```

```
#
```

```
iface enp3s0 inet manual
#
iface enp4s0 inet manual

auto vmbr0
iface vmbr0 inet static
    address 10.10.2.254/24 #IP
    gateway 10.10.2.1
    bridge-ports enp1s0 #
    bridge-stp off
    bridge-fd 0
```

Ctrl + O Ctrl + X

```
systemctl restart networking.service
```

PVE IP

Revision #5

Created 29 December 2022 15:28:39 by

Updated 29 December 2022 15:45:15 by